



Mounting bracket

The Mounting bracket has been designed to address the installation of Sterionizer units for spaces where the air supply system is not standard and does not allow the installation of units intended for air ducts.


The unit includes a modular structure that allows it to be installed in ventilation systems located in refrigeration rooms and other industries with the limitation of air conditioning

systems. The system ensures reliable and consistent conditions and helps to reduce the spread of pathogens.

The mounting bracket is specially made for mounting the Sterionizer units in front of evaporators, air fans or any kind of air flow.



Mounting Bracket Specifications

Product number	Vertical unit: IP5-025V-211 Horizontal unit: IP5-025V-212	
Room Size	up to 200 m ²	
Recommended Air Flow	up to 6000 m ³ /h	
Min Air Velocity (m/s)	Min. 0.3 m/s	
No. of integrated Sterionizers D6	1 unit	
Operation Environment	Temp. (-10) - (+70)°C, Hum. 20-93% non-condensing	
Power Supply Adapter	US Version 110 V, 1 Phase, 60 HZ EU Version 230 V, 1 Phase, 50 HZ	
Duct Unit Input Voltage	12/24 V AC/DC, 200 mA, isolated	
Control Network Connection	Modbus RS485	
Outside Dimensions	IP5-025V-211:	180 x 125 x 35 mm (L x W x H)
	IP5-025V-212:	129 x 123 x 160 mm (L x W x H)
Weight	IP5-025V-211:	530 g
	IP5-025V-212:	630 g
Recommended distance from the air outlet in a duct system	up to 15 m	

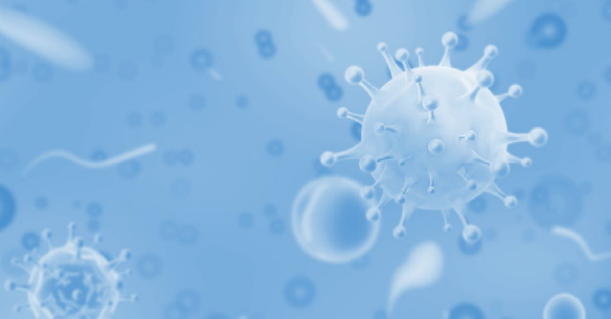


STERIONIZER™


Mounting Bracket Installation options

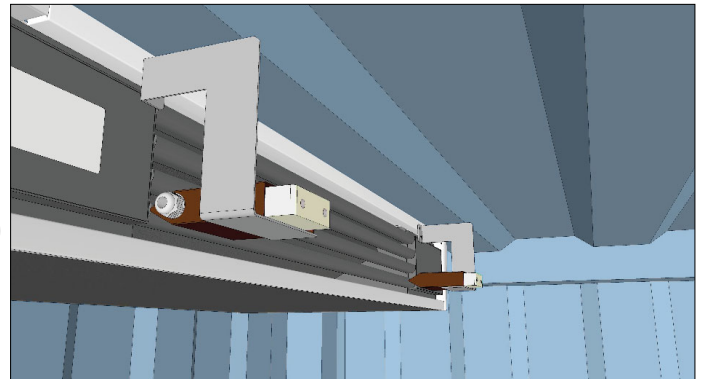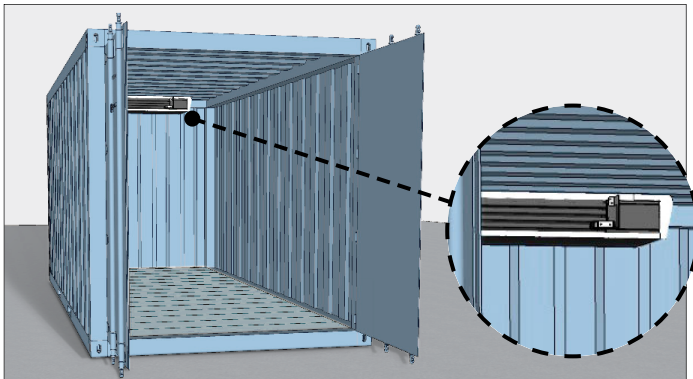

The Mounting Bracket can be used to install the ionizer in non-standard air supply systems

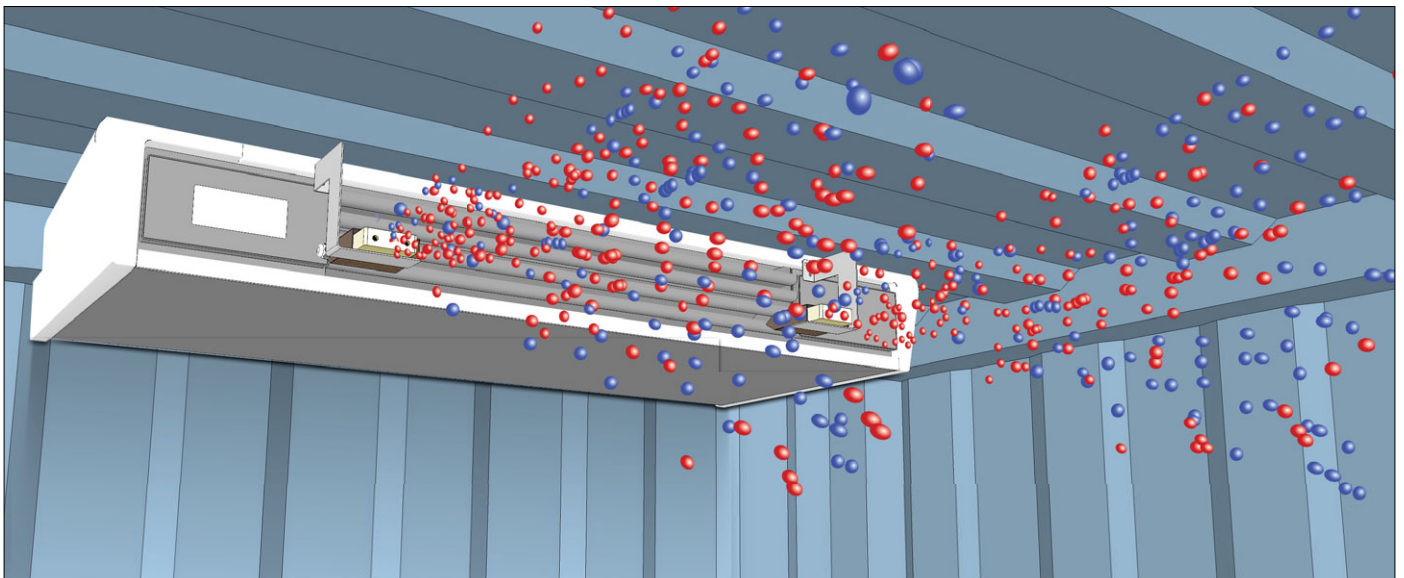

The ionizer should be installed in the air flow to help distribute the ions in the space

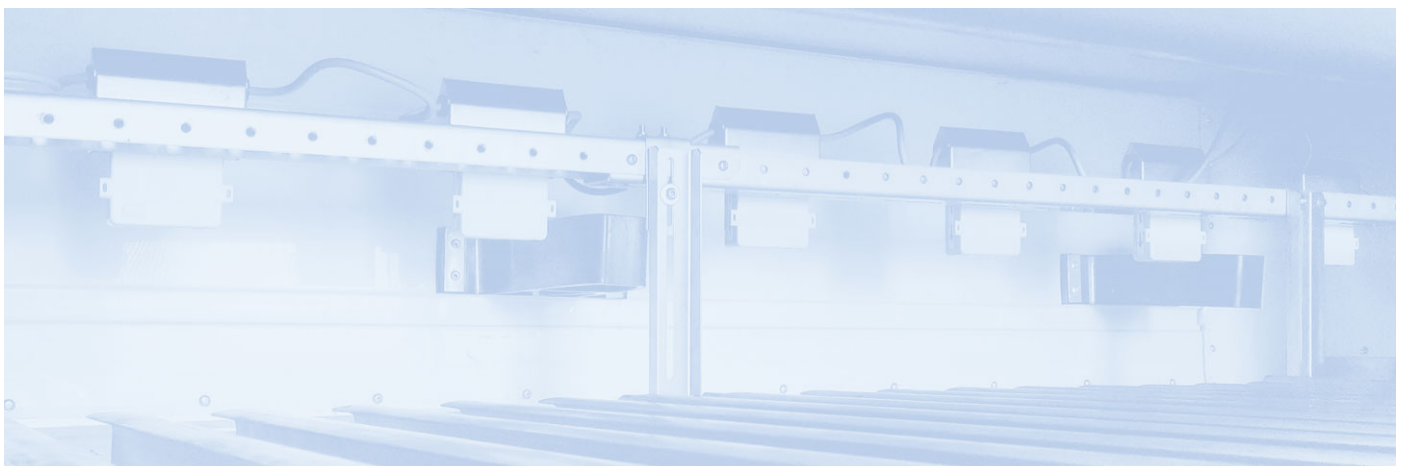

FILT AIR Ltd. Member of the Beth-El Group

Main Office: P.O. Box 166 Zikhron Yaaqov, 3095101, Israel

Tel: +972-4-6107777 | Fax: +972-4-6350396

info@filt-air.com | www.filt-air.com | www.sterionizer.com

